
# Somfy motor for switch control

# Connect the motor to the electricity

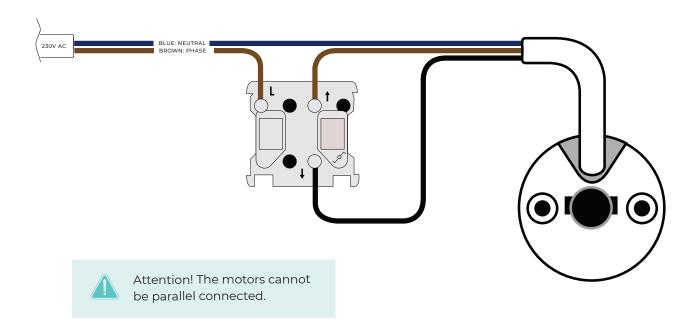


# Installation of the rolling direction


- Press the lower button of the switch.
- 2 Does the blind go down? The direction is installed correctly.
- Does the blind go up? You need the change the rolling direction. Swap the brown and black wire at the motor on the back of the switch.



Attention! Make sure no buttons are pushed while switching the wires.

- Push the lower or upper button of the switch until the blind automatically stops at the end. If the blind doesn't stop in time, push the stop button.
- With a hexagonal key of 4 mm (HEX4) you can adjust the adjustment bolt on the motor.

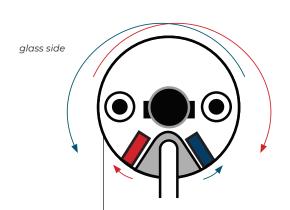

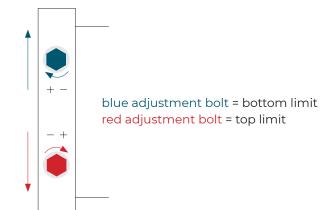

## Installing the top limit:

rise the top limit = turn in the direction of the "+" (clock wise)

You will see that the blind rises in small steps. Once you've reached the right height, stop turning and your top limit is installed.



The blind will not respond immediately, but when you push the lower and then the upper button of the switch, you will see that the blind stops at a lower limit.

For the venetian blind in alu and wood we always leave a gap of +/-1 cm between the first slat and the headrail. If the cords are under tension this will cause them to wear and break more rapidly. Therefore we advise you not to change the upper position!

## Installing the bottom limit:

rise the bottom limit = turn in the direction of the "-" (counter clock wise)

The blind will not respond immediately, but when you push the upper and then the lower button of the switch, you will see that the blind stops at a higher limit.

#### lower the bottom limit = turn in the direction of the "+" (clock wise)


You will see that the blind lowers in small steps. Once you've reached the right height, stop turning and your bottom limit is installed.



Attention! If the blind has a contra-rolling direction, the function of the adjustment bolts is reversed.

Manual Somfy motor with switch control V. 24-01

- Push the lower or upper button of the switch until the roller blind automatically stops at the end. If the blind doesn't stop in time, push the stop button.
- 5.2 With a hexagonal key of 4 mm (HEX4) you can adjust the adjustment bolt on the motor.

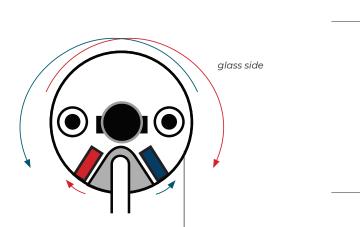

red adjustment bolt = bottom limit blue adjustment bolt = top limit

## Installing the top limit:

rise the top limit = turn in the direction of the "+" (clock wise)

You will see that the blind rises in small steps. Once you've reached the right height, stop turning and your top limit is installed.



The blind will not respond immediately, but when you push the lower and then the upper button of the switch, you will see that the blind stops at a lower limit.

For the venetian blind in alu and wood we always leave a gap of +/- 1 cm between the first slat and the headrail. If the cords are under tension this will cause them to wear and break more rapidly. Therefore we advise you not to change the upper position!

### Installing the bottom limit:

rise the bottom limit = turn in the direction of the "-" (counter clock wise)

The blind will not respond immediately, but when you push the upper and then the lower button of the switch, you will see that the blind stops at a higher limit.

#### lower the bottom limit = turn in the direction of the "+" (clock wise)

You will see that the blind lowers in small steps. Once you've reached the right height, stop turning and your bottom limit is installed.



Attention! If the blind has a contra-rolling direction, the function of the adjustment bolts is reversed.

www.diaz.be